


How to Disassemble CT2 sensors, Barometer, Weather monitor at Karasu

T. Sasaki 2010-10-18

CT2 sensor base rods used at Karasu

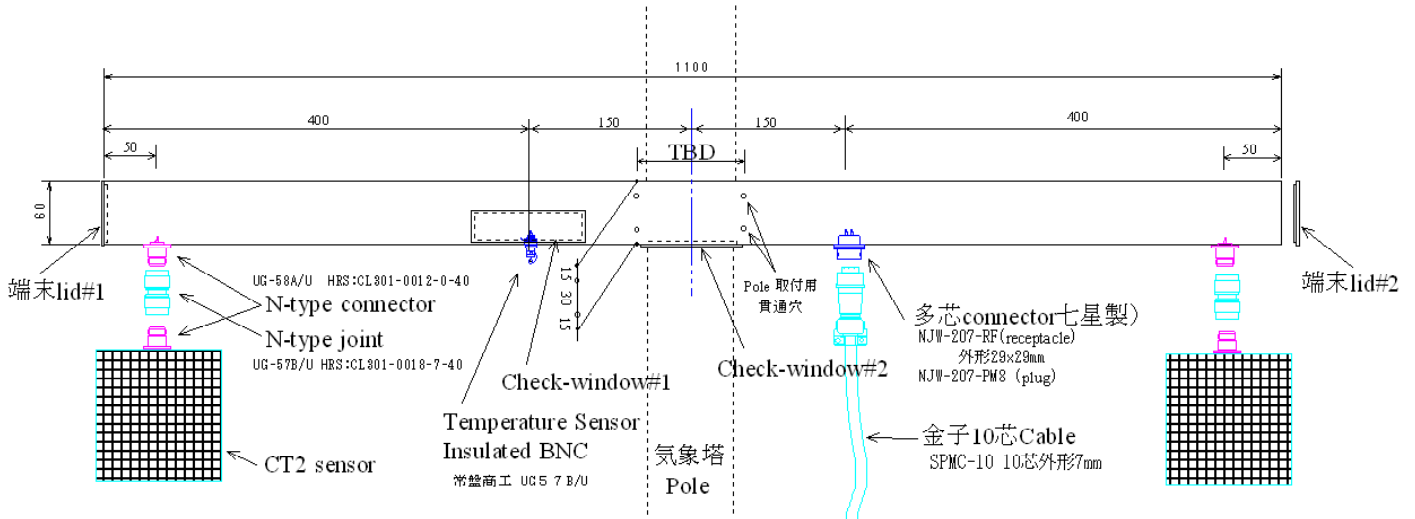

CT2 Sensor Attachment

Ver.2007-07-16/31
T.Sasaki

- 図面1 (本図面) 構成図
- 図面2 Support Stay 図面
- 図面3 Lid (2種類) 図面



Five sensor base rods for CT2 sensors and a barometer, and its controller at Kashi



CT2 sensors and a barometer at Karasu

How to disassemble CT2 sensors, a barometer and a Weather monitor

check

1. disconnect cables from sensor base rods.
2. remove CT2 and Temperature sensors from sensor base rods.
3. remove a barometer (Pressure gauge) from the sensor base rod.
4. remove a Weather monitor from the sensor base rod.
5. remove sensor base rods from the tower.
6. remove cables from the tower.
7. disconnect cables from control boxes.
8. lift down the control boxes.
9. pack CT2 sensors, a barometer, a Weather monitor with its power unit, sensor base rods, cables, a control box, and KEITHLEY digital multimeter.
10. pack the control PC.
11. finally confirm check items (this doc) to complete the disassemble.




a barometer
(Pressure gauge)
at Karasu



Weather monitor
at Karasu


③ a barometer on the tower

④ a weather monitor on the tower

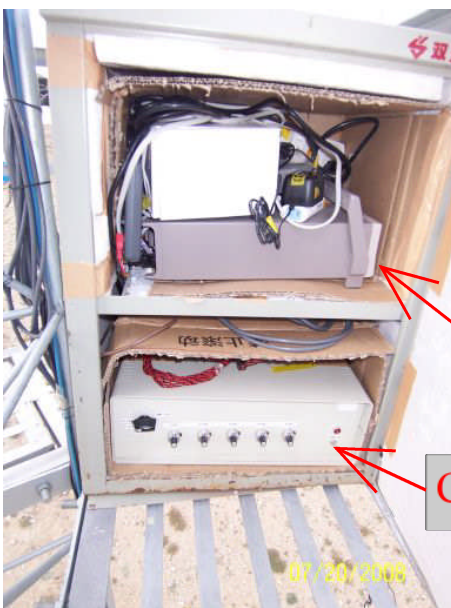

KEITHLEY
digital multimeter

CT2 control box

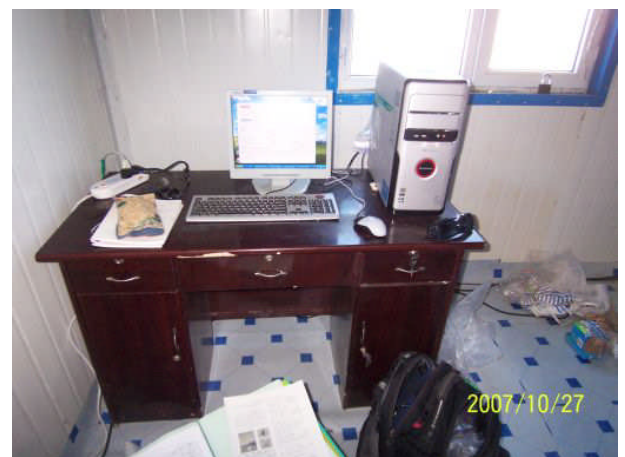

⑧ PC at Karasu

⑥ controller and KEITHLEY digital multimeter on the tower